


WHEN WINDOWS ARE SPACED CLOSE TOGETHER, LOCATE VERTICAL EXPANSION JOINTS AT WINDOW JAMBS

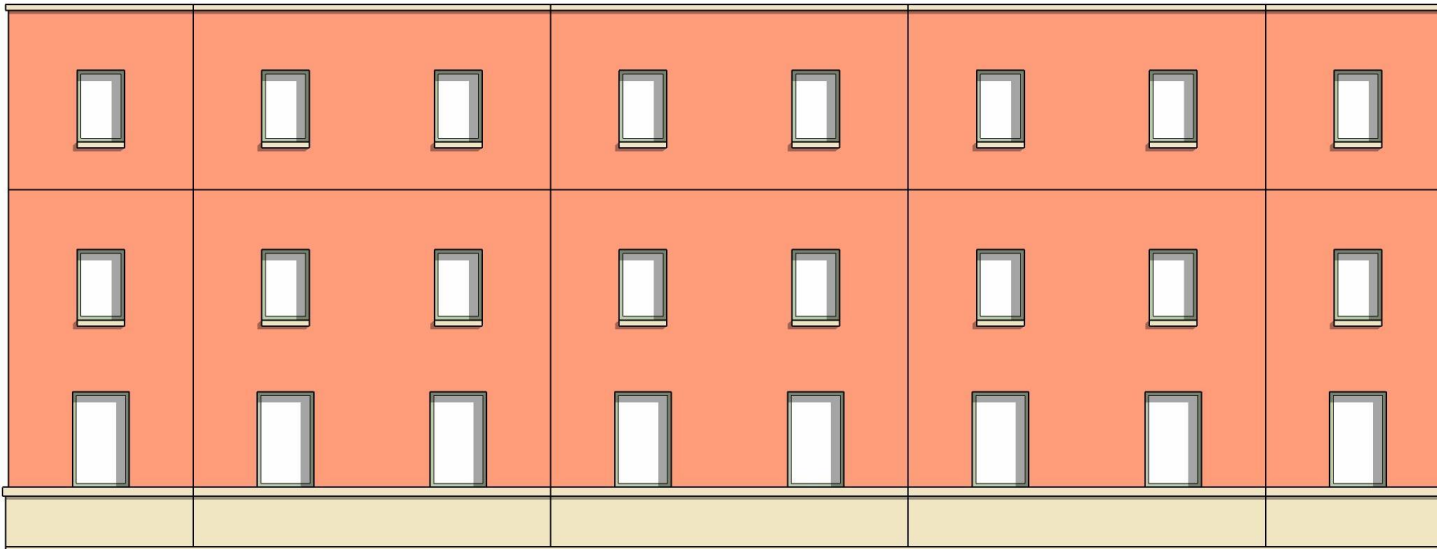

WHEN WINDOWS ARE SPACED FAR APART, LOCATE VERTICAL EXPANSION JOINTS BETWEEN WINDOWS

# ELEVATIONS

## MOVEMENT JOINT LAYOUT

DIAGRAM 01.410.1311

REV. 08/10/09

International Masonry Institute



800-IMI-0988 [www.imiweb.org](http://www.imiweb.org)

© 2011 INTERNATIONAL MASONRY INSTITUTE