


KEY NOTES

- 01 Face brick
- 11 Terra cotta Parapet, hand pressed
- 15 Backup masonry, double wythe or with CMU Block Construction if complete rebuild
- 32 Veneer anchor
- 33 SS J-hook anchor bolt, 1/2" dia.
- 38 SS threaded rod, 3/8" or 1/2" dia.
- 51 SS thru-wall flashing w/ integral drip edge, seal and adhere
- 58 Alternative anchorage: Strap anchor w/ horizontal threaded rod into TC, anchored into top of masonry
- 61 Air/moisture/vapor barrier as req'd
- 78 3/8" thick compression plastic shim, typ.

SEE MASONRY COPING
JOINT OPTIONS 01.030.0811

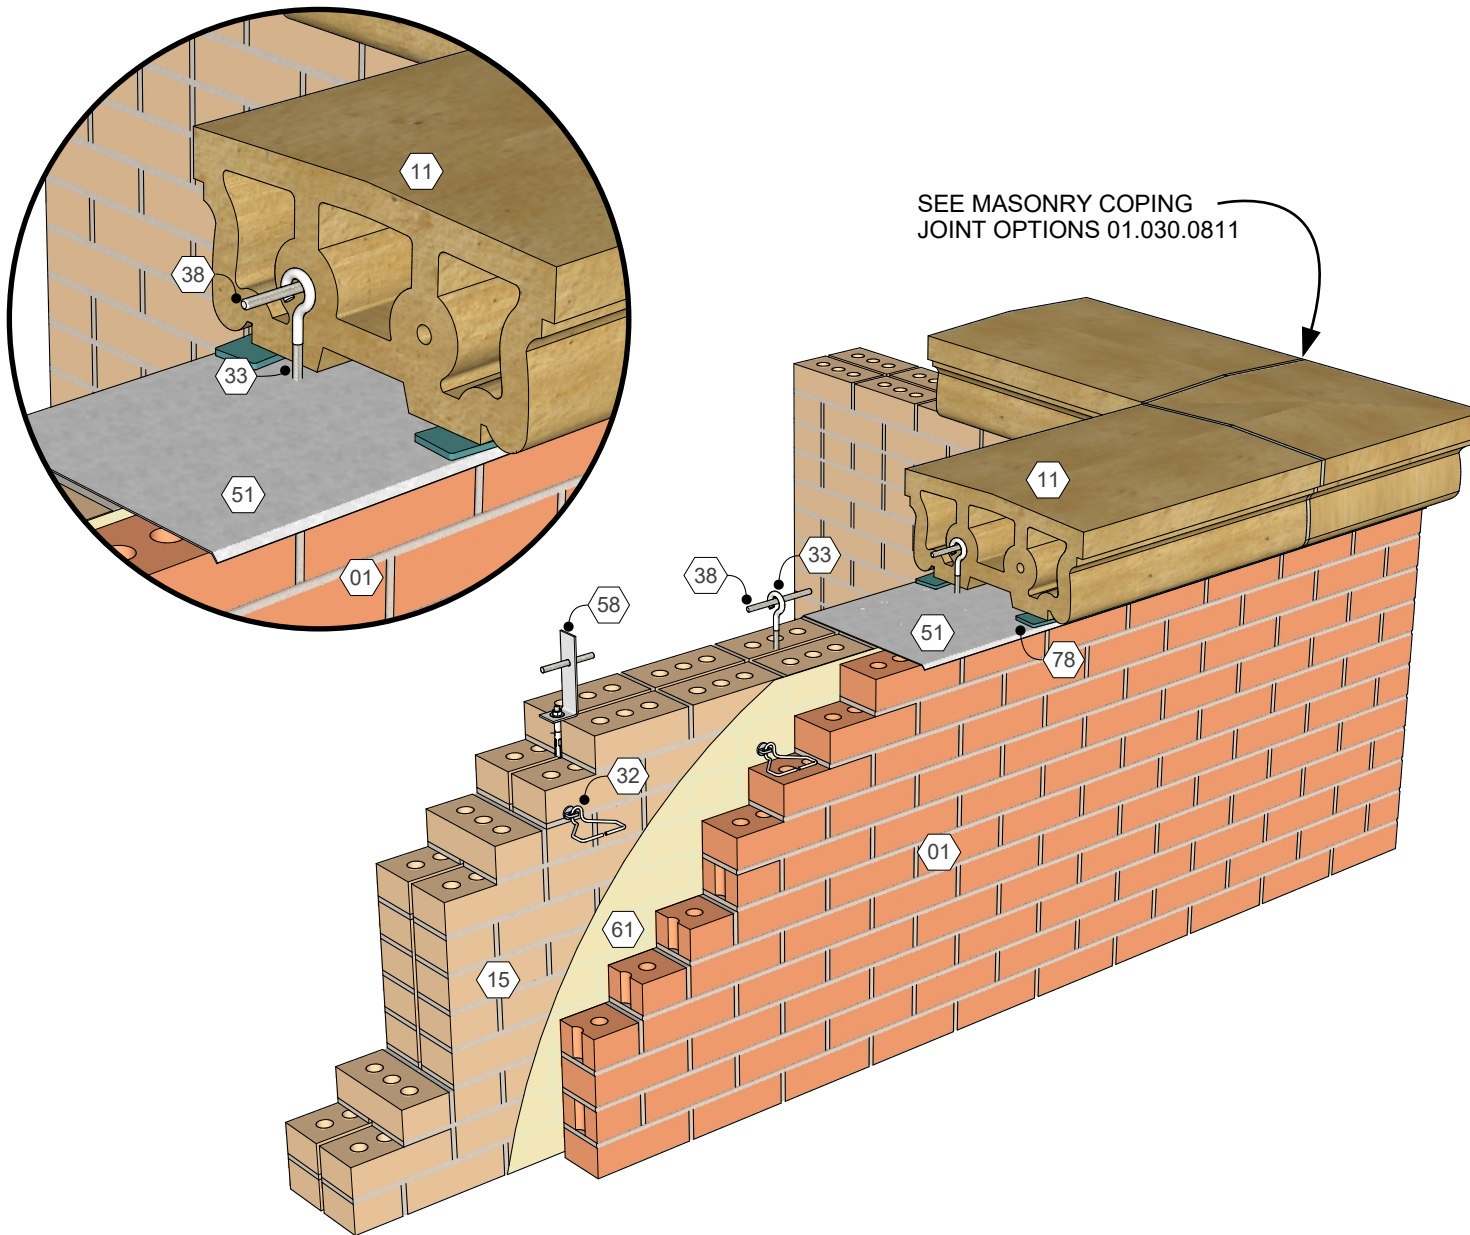

Parapet Corner Assembly, Extruded
Detail 11.030.0812 Rev. 05/18/18

KEY WORDS

Terra cotta, Coping, Corner, Brick, Flashing, Restoration, Anchor, 11.030.0811

International Masonry Institute



800-IMI-0988 www.imiweb.org